


EQ2 Firmware Update Guide and Version History


Introduction

Thank you for purchasing the EQ2. We at Source Audio are constantly working to maintain and improve our existing products. In order to add new features, engines, or fix functional issues, we will occasionally release firmware updates. Updates for the EQ2 are done exclusively through the Neuro Desktop Application.

Connect the 9V power supply to the EQ2 and USB to your Mac or Windows computer. Open the Neuro Desktop application and the EQ2 will appear in the Connections tab. click the  (Update Device) button to download the update. If a newer file isn't automatically found, select the option to manually locate a file and navigate to the desired .saxf file on your system. Do not disconnect or power off your pedal while the update is running.

Neuro Desktop

File Device View Help

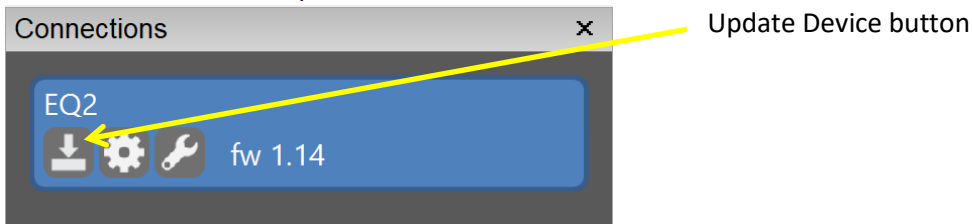

Firmware Version History

Version 1.12 (Initial Public Release)

Version 1.13

- Fixed bug related to Activity LED being set incorrectly after saving a preset from the Desktop or Mobile apps.
- Fixed bug that could carry over external control settings between presets incorrectly.

Version 1.14

- Fixed MIDI receive bug when Bank Change CC messages were sent immediately before a Program Change.
- Updated Preset Copy function when using MIDI PC. To copy, press and hold SELECT/SAVE button until the preset LED blinks rapidly. Send a desired MIDI PC number (USB-MIDI or DIN jack) to set the location for the current preset to be copied to. Press and hold SELECT/SAVE again until the LED blinks slowly to complete the copy.
- Fixed bug where Activity LED could remain lit when the OUTPUT knob was set to unity gain.
- Added Hardware Option for Tuner Range. Added modes "Bass High" and "Bass Low" for improved performance on bass guitars.